



# Ouija Windmill

## Assembly instructions

1. 6" dowel with pinhole at one end

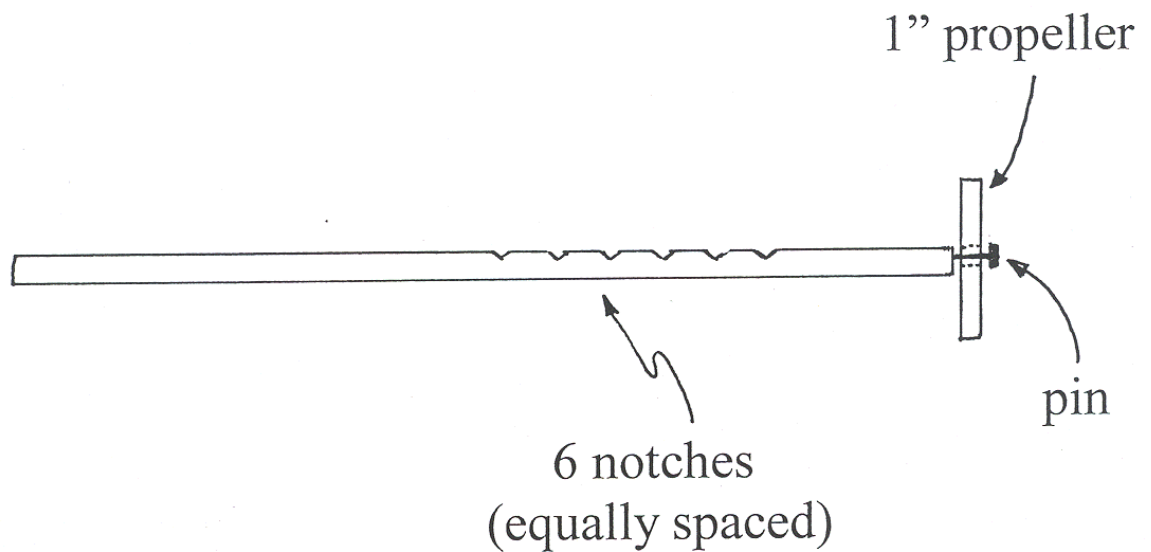

 2. 3" dowel for activating rotation



Not to scale